

CRADLE STORAGE FOR THE FLYING SCOT

If you plan to store your Flying Scot on a lift or cradle, we recommend that all of the weight be carried by the center raised keel portion of the hull. One cross support under the mast step and the other under the aft portion of the centerboard trunk will support the boat where the hull is stiffest and least likely to deform. This requires a distance of about 6 feet between the cross supports. Fore and aft supports should be installed to stabilize the boat, but not to carry any significant amount of weight. When the boat is rocked, a small amount of light should be visible between the boat and the fore and aft supports.

