

FLYING SCOT®


Centerboard Winch Assembly Instructions

Please read all instructions before beginning. If you have any questions please call 1-800-864-7208 for assistance.

1. Install the STARBOARD cotter pin and washers
2. Pull out on the winch so that the STARBOARD cotter pin is tight against the outside washer.
3. Mark the shaft with a punch approximately ¼” inside the port leg of the stanchion
4. Drill the hole for the PORT cotter pin with a 3/16” bit
5. Install the remaining washers and cotter pin and cable on the PORT side

Note 1: When winding the cable, the wind of the cable should look similar to what you see in the photo

Note 2: Winding the cable to port will give the winch a starboard component and keep the winch drum from rubbing. It must run free. Once the cable is wound properly, it will have enough memory to return to its wind. Never lower the board without control on the line. Do not let it drop free.

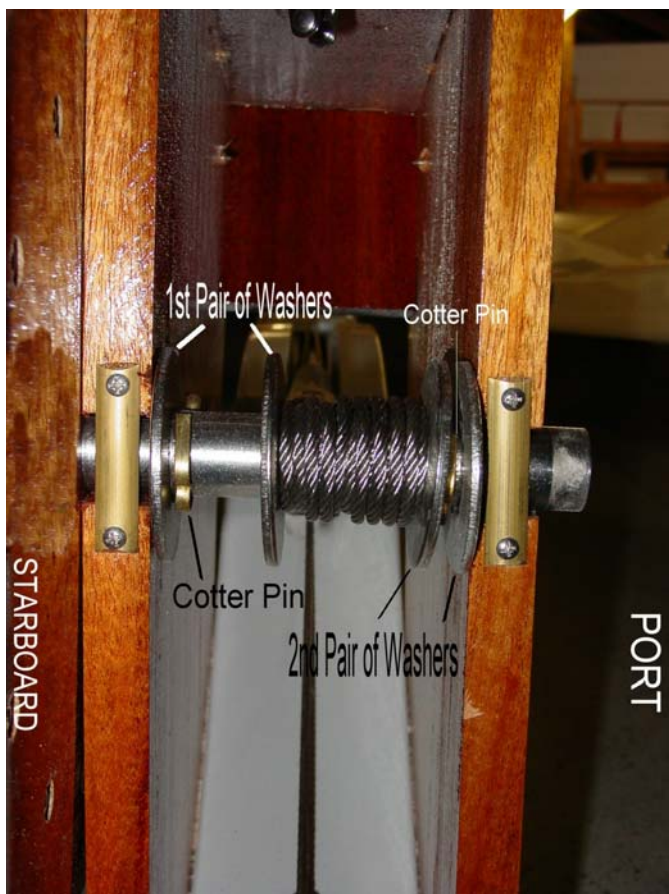

Note: Both Images are from the Bow looking Aft