

FLYING SCOT®


INSTRUCTIONS FOR CONVERSION OF ZEPHYR GOOSENECK TRACK

Be sure to measure the distance from the boom to the deck and mount the gooseneck track so that the height of the boom from the deck remains unchanged. Flying Scot Sailing Association class rules require a minimum distance of 24 inches from the top of the boom to the deck.

Follow the instructions for installing the standard gooseneck track to get the modified gooseneck track into the sail track at the proper height. Be sure to have the countersunk hole on top. The end with the two holes that are not countersunk should be on the bottom.

Check to be sure the boom height from the deck is correct.

Use the gooseneck track as a template to drill a 5/32" hole into the mast at the upper countersunk hole. Use a Phillips screwdriver to install the flat head screw in that hole. Use the bottom hole in the gooseneck track as a template to drill a second 5/32" hole into the mast. Use a Phillips screwdriver to install the pan head screw in that hole.

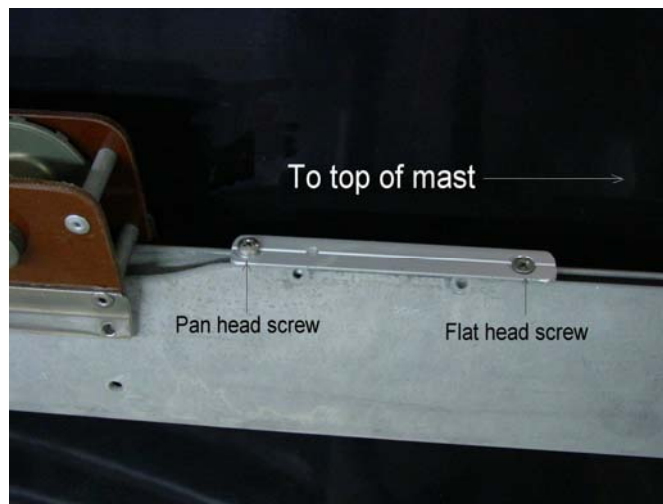

These instructions are intended for the exclusive use of Flying Scot, Inc. customers. Any unauthorized use is strictly prohibited.