


MASTHEAD INSTALLATION

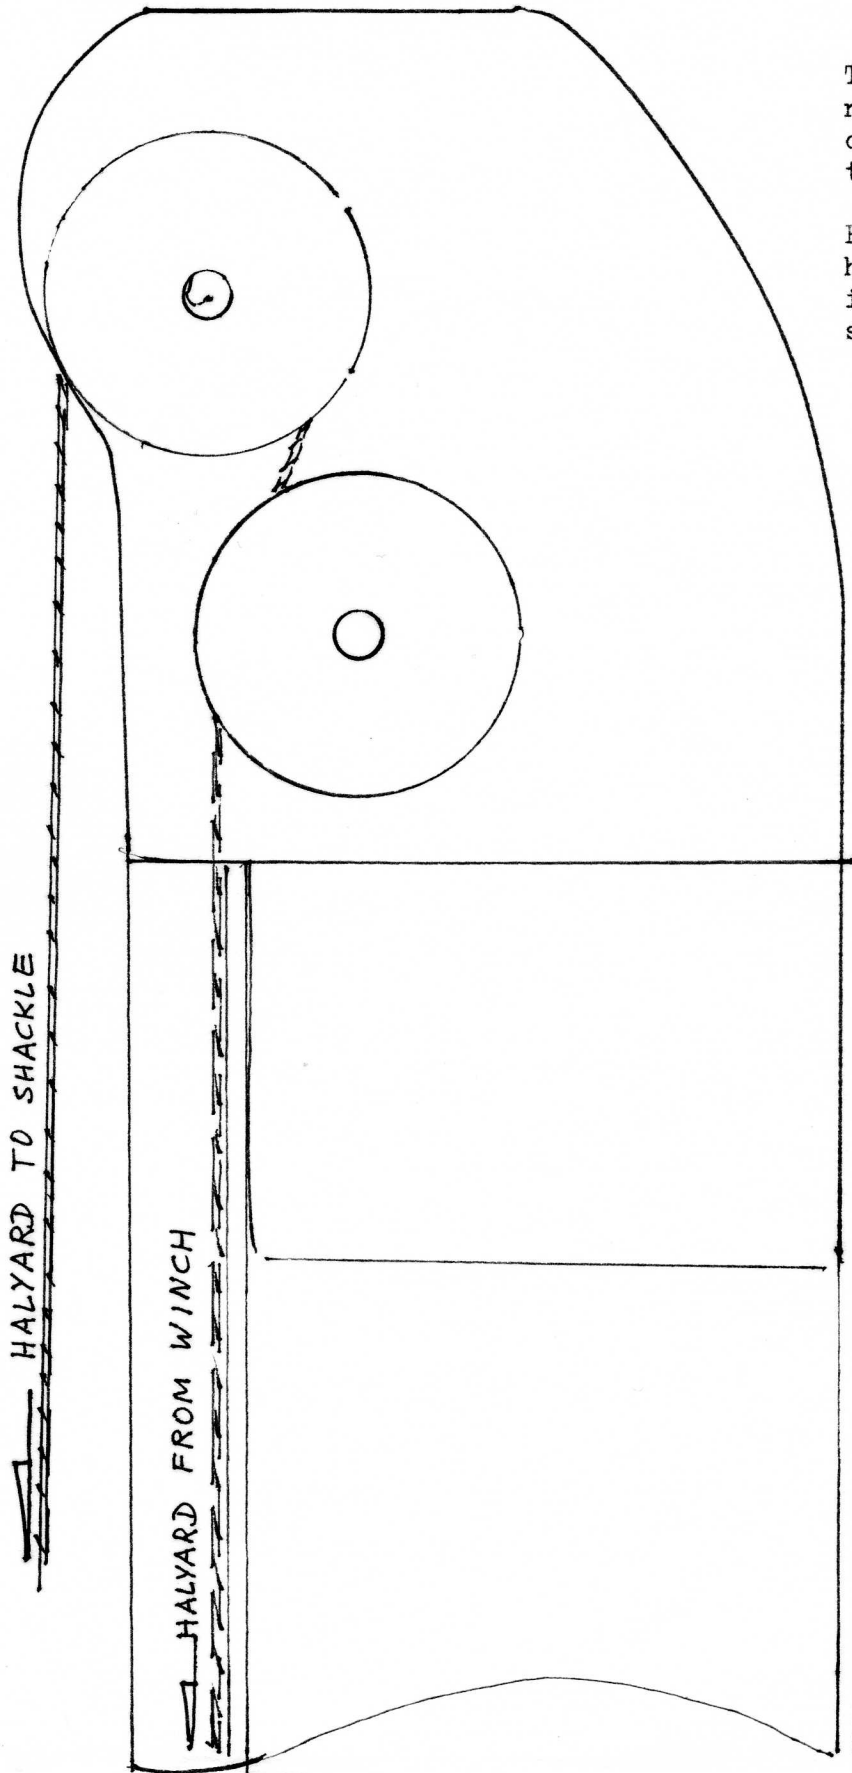

The old masthead  
needs to be drilled  
out and the inside  
the mast smoothed.

Epoxy the new mast-  
head in place to  
insure that it is  
sealed.